
Quick Operation Guide

DAB USB Digital Receiver



© Copyright 2007, All Rights Reserved.

No part of this manual may be reproduced in any form without the prior written permission.

Note


This Quick Guide is to guide users to install **dabMate-VERDI** or **dabMate-BERIO**, While installing the software. Please follow the steps of **dabMate-VERDI** or **dabMate-BERIO** to complete the installation.

Purpose

This document provides an overview of the installation, setup and operation of the **dabMate-VERDI / dabMate-BERIO** software. It also includes the information about the folder structure of the software, a quick overview of the system information and the basic operating procedure in detail.

Preface

dabMate-VERDI / dabMate-BERIO is a multimedia platform which supports the Digital Audio Broadcasting and Internet Radio services by **dabMate** technology. **dabMate-VERDI / dabMate-BERIO** is designed to follow Eureka-147 DAB specification and to enrich your digital entertainment. **dabMate-BERIO** supports DMB player function in additionally.

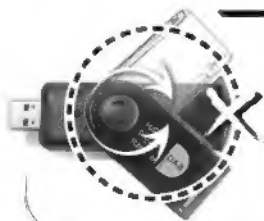

Caution

DO NOT swing the USB cover over the antenna connector, in order to avoid the housing damaged by improper operation.

Accessories

The package provides the following accessories:

1. USB Digital Receiver
2. Installation CD (user manual is included)
3. External magnetic flat antenna
4. User's quick guide
5. USB extension cable

System Requirements

Before installing the software, please make sure your computer fits the system requirement of the software and hardware.

Hardware Requirements

- CPU : Intel Pentium IV 750MHz & above
Intel Celeron 750MHz & above
AMD Sempron K8 & above
- Memory : 256MB RAM & above
- H.D.D. : 32MB free disk space
- USB : USB 1.1& above

Software Requirements

- OS : Windows® XP SP 2 (Recommend)

Technical Support

<http://www.dabmate.com>

Install

Please follow the steps to install the dabMate-VERDI / dabMate-BERIO software:

1. Please insert the installation CD to the CD ROM drive.
2. The Autorun window will pop out, follow the installer to install the **dabMate-VERDI / dabMate-BERIO** software or double-click the **<VERDI_Setup.exe> / <BERIO_Setup.exe>** file on the CD to run the setup program of the **dabMate-VERDI / dabMate-BERIO** software.
3. The **dabMate-VERDI / dabMate-BERIO** License Agreement will pop out. Read the agreement carefully and select **Yes, I Accept** check box to accept the terms within, Click **Next** to continue the installation.
4. Select the destination folder by **Browse** button to install the **dabMate-VERDI / dabMate-BERIO** software. The default folder is :
C:\program files\dabMate\VERDI (BERIO).
Click **Next** to continue. Please note that the minimum requirement of free disk space is 10MB.
5. Follow the wizard to select the default shortcut and click **Next** to continue the installation.
6. Select your favorite language in the pop-up application language window and click **Next** to continue the installation.
7. Select the region in the band selection window for the correct band frequency to receive the signal. Or select **Others** to manually set up the band frequency.
8. Make sure the USB Digital Receiver is correctly plugged in. Press **Continue** to accept the detected hardware.
9. Click **Close** to finish the installation process.

The dabMate-VERDI / dabMate-BERIO software is ready to start the program in the start menu on the windows task bar:


```
graph LR
    Start[Start] --> Programs[Programs]
    Programs --> dabMate[dabMate]
    dabMate --> VERDI[VERDI]
    dabMate --> BERIO[BERIO]
    VERDI --> VERDI_Label[VERDI]
    BERIO --> BERIO_Label[BERIO]
```

Uninstall (if necessary)

Please follow the steps to uninstall the software:

1. Click [Start] → [Programs] → [dabMate] $\begin{cases} \nearrow \text{[VERDI]} \\ \searrow \text{[BERIO]} \end{cases}$ → Uninstall
and uninstall wizard will guide you to uninstall this software.
2. Click **Next** to start the uninstallation process.
3. Confirm the folder name where the **VERDI / BERIO** was installed and click **Uninstall** to start removing the software.

Hardware Activation / Run the Program

1. Make sure to plug-in the USB Digital Receiver Into an USB port if you want to listen to **DAB** programs.
2. Make sure your computer is successfully linked to the internet for **Internet Radio** services.
3. Click the program
[Start] → [Programs] → [dabMate] $\begin{cases} \nearrow \text{[VERDI]} \rightarrow \text{VERDI} \\ \searrow \text{[BERIO]} \rightarrow \text{BERIO} \end{cases}$
to run the program.
4. The operating procedures are described in details in the user's manual by clicking .




dabMate-VERDI




dabMate-BERIO

The Information Panel

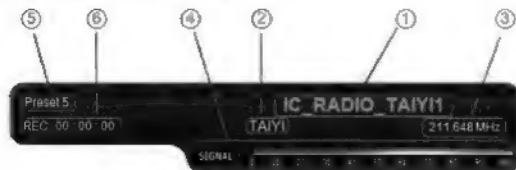


- | | |
|---------------------|--------------------|
| ① Service Name | ④ Signal Strength |
| ② Ensemble Name | ⑤ Preset Indicator |
| ③ Channel Frequency | ⑥ Recorder Timer |
| ⑦ Increase Volume | ⑧ Decrease Volume |
| ⑨ Volume Bar | ⑩ Mute |

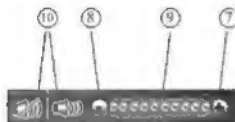

- | | | |
|--------------------|------------------------------|------------------------|
| ⑪ Full Scan | ⑭ Play | ⑰ Preset Buttons 1 - 5 |
| ⑫ Previous Station | ⑮ Stop / Mute | |
| ⑬ Next Station | ⑯ Record (for DAB mode only) | |

DMB Player Display (for dabMate-BERIO only)

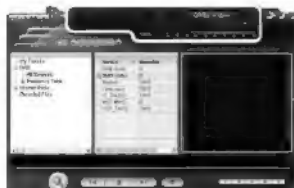

DMB Player Display